

„Gourmet“



100047

Bedienungsanleitung

Suppentopf

Seite 1 bis 16

D/A/CH

Instruction manual

Soup kettle

from page 17 to 32

GB/UK

Mode d'emploi

Soupière

de page 33 à page 48

F/B/CH

ENGLISH

Table of contents

1. Safety 18
1.1 Key to symbols 18
1.2 Safety instructions 19
1.3 Proper use 23

2. General information 24
2.1 Liability and Warrantees 24
2.2 Copyright protection 24
2.3 Declaration of conformity 24

3. Transport, packaging and storage 25
3.1 Delivery check 25
3.2 Packaging 25
3.3 Storage 25

4. Technical data 26
4.1 Overview of parts 26
4.2 Technical specification 27

5. Installation and operation 28
5.1 Installation 28
5.2 Operation 29

6. Cleaning 31

7. Waste disposal 32

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

Information about the instruction manual

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.2 Safety instructions

- The device must not be operated by **children below 8 years old**, as well as persons physically, sensorially, or mentally impaired, or having low experience and/or knowledge, unless they are supervised or instructed in range of safe operation and resulting hazards. **Children** should be continuously supervised in order to avoid playing with the device. Cleaning and **maintenance** must not be realized **by children** left without supervision. **Children below 8 years old** must not be present in the vicinity of the device and the supply cable.
- **Never** leave the device unattended during its operation.
- The device is not designed for operation with external timer switch or remote control.
- The device must be operated only in perfect technical condition.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**

- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



WARNING! Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not lay the power cable over carpets or other inflammable materials. Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.

- Never immerse the device, supply cable, or plug in water or other liquids.
- Do not use any aggressive agents and protect the device from the water penetration.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



HOT SURFACE! Burn and injury hazard!

To avoid the hazard results please follow the safety instructions below.

- Never move the device containing hot liquids and food products, as this may lead to spilling and cause serious burns.
- During the operation the hot steam escapes from the device. Remove the lid only with the use of protective gloves or an appropriate cloth.
- Never overfill inner and outer pots of the device: hot boiling liquid poses a risk of burns.
- During the work the external surface of the device becomes very hot. To avoid burns do not touch these surfaces with bare hands. The device should be controlled using only a temperature dial and a lid handle.



WARNING! Fire and explosion hazard!

To avoid the hazard results please follow the safety instructions below.

- **Never** use the device near the flammable materials (e.g. petrol, spirits, alcohol, etc.). High temperature may result in their evaporation leading to the contact with the sources of combustion. This may result in deflagration leading to the personal injury and property damage.
- In case of fire before the fire extinguishing activities remove the plug from the socket or disconnect the device from the power supply (pull the plug!). **Note:** Do not spray the device with water when it is still connected to the power supply: **Electric shock hazard!**



CAUTION!

In order to avoid any damages of the device follow the instructions below.

- **Never** use the device without liquid. In case of activation of empty device it is additionally protected from overheating by **dry operation protection**. When that protection activates, leave the device for cooling before filling with water.
- Never wash the device or its elements in the dishwasher. Do not wash the device in running water!
- Do not clean the device surfaces with sharp objects or abrasive cleaning agents.

1.3 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The device is intended for home use or in similar places such as:

- in stores, offices, or similar work places;
- in agricultural farms;
- for the customers in hotels, motels, and similar places;
- in breakfast restaurants.

The soup kettle is intended only for **maintaining the temperature of** soup, goulash, sausages.

Do not use the **soup kettle** for:

- cooking soups or other dishes;
- heating flammable, noxious and volatile liquids or other such materials.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, If required refresh or renew.

4. Technical data

4.1 Overview of parts



- ① Lid handle
- ② Rotary and foldaway lid
- ③ Ladle cut-out
- ④ Outer pot
- ⑤ Control light (green)
- ⑥ Temperature indicator
- ⑦ Temperature control
- ⑧ Legs (3)
- ⑨ Food label
- ⑩ Carrying ring

4.2 Technical specification

Name	Soup kettle „Gourmet“
Code-no.:	100047
Material:	Outer pot: plastic,black; inner pot, lid: stainless steel
Power:	450 W / 230 V 50 Hz
Capacity:	10.0 litres
Temperature range:	50 °C - 95 °C
Dimensions:	Ø 390 mm, height 380 mm
Weight:	5.2 kg
Accessories:	1 soup ladle, adhesive soup labels included

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove all packing material.



CAUTION!

Never remove the rating plate and any warning signs from the device.

- Place the device on top of an even, stable, dry, and water-resistant surface which supports the weight of the device and is not heat sensitive.
- **Never** place the device at the edge of a table to avoid accidents.
- **Never** place the device in humid or wet environment.
- **Never** place the device on the flammable surfaces.
- There must be sufficient distance to the walls, cabinets, shelves, etc. during operation in order to assure free circulation of hot air released from the device.
- Place the device so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation! Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

Connect the device only to properly installed single socket with protective terminal.

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

5.2 Operation

The soup kettle consists of a warmed outer pot with a thermostat, removable inner pot and a ring handle put onto outer pot as its upper part. The device is provided with a high quality steel cover with two thermally insulated handles. The cover has hinges and a spoon slot.

The hinged cover can be set in two different positions:

Closed: for fast and energy saving cooking

Open from one side: for filling and food serving

The soup kettle warms the food in a water bath. The food is kept warm by electrically warmed water.

1. Clean and rinse thoroughly the inner pot, carrying ring handle and cover before first use. Dry well.
2. Fill the outer pot with approx. 1 litre of water.



WARNING!


Do not turn on and/or allow an empty or dry soup kettle to warm up. Never fill the outer pot with more than 1 litre of water since water may spill over while inserting the inner pot.



NOTE!

In order to shorten the warming time the kettle may be filled with already hot water. When using cold water it has to be warmed longer.

3. Fill the inner pot with desired food. It can be filled up only to the upper marked level of the pot.
4. Put the inner pot inside carrying ring handle and pull the ring handle up so as to insert the inner pot into the outer pot by carrying it with the ring handle.
5. Put the cover on the soup kettle.
6. Plug the soup kettle into a grounded type single socket.

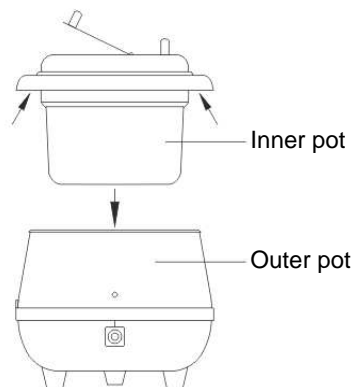

7. Use the temperature regulating knob to set it to desired temperature (50°-95°C). The red warning light will light. When the set temperature is reached, light goes off, and it lights again when the temperature drops and the device starts to warm up.
8. With the extremal possible setting the food is warmed up to the temperature of approx. 80°C. Lower temperature can be set by turning the temperature regulating knob down.



NOTE!

The warming time depends on the quantity and temperature of water in the outer pot.

9. For **food serving** you should open the hinged cover of the soup kettle only.
10. In order to **fill the soup kettle with food** you should remove the cover completely by using both handles.
11. If the device is to be left unused for longer period you should set the temperature adjustment knob in the „0“-position and unplug the device!
12. The device is equipped with a function preventing it from **operating when dry**. If the device is accidentally turned on without water or with too little water, the safety mechanism will be activated and the device will be automatically shut off. In this case, turn the device off and wait for it to cool. After cooling, fresh water may be poured in and the device can be used normally.

6. Cleaning



WARNING!

Disconnect the device from the power supply (unplug!) before cleaning. Let the device cool down. Never clean the device with use of water jet! Be careful and do not let the water into the device.

Cleaning

- After each use, wash the inner and outer pots and the carrying ring, as food, spices and salt are aggressive and may damage the device.
- Set the temperature dial to "0" and remove the device's plug from its socket. Wait for the device to cool.
- Remove the inner pot. Wash the lid, carrying ring and inner pot with a soft cloth and mild cleaning agent.
- Only empty the outer pot when the remaining water has cooled, otherwise there is a **risk of burns!**
- Wipe the outer pot on the inside and outside with a soft, moist cloth.
- Next, dry all washed parts thoroughly.
- If the device is to be washed, transported or remain unused for a longer period of time, empty it.
- Always use a soft cloth and **never** use coarse cleaning agents that could damage or scratch the surfaces of the device.
- After cleaning dry and polish the surface with dry cloth.

Storage

- If the device is not used for any lengthy period of time, clean it according to the aforementioned description and store it in dry, clean place protected against cold, sun and children. Do not place any heavy objects on the device.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.