

WP1200



A114365

ENGLISH

Table of contents

1. Safety 18
1.1 Key to symbols 18
1.2 Safety instructions 19
1.3 Proper use 21

2. General information 24
2.1 Liability and Warrantees 24
2.2 Copyright protection 24
2.3 Declaration of conformity 24

3. Transport, packaging and storage..... 25
3.1 Delivery check 25
3.2 Packaging 25
3.3 Storage 25

4. Technical data 26
4.1 Overview of parts 26
4.2 Technical specification 27

5. Installation and operation..... 28
5.1 Installation 28
5.2 Operation 28

6. Cleaning 31

7. Waste disposal 32

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



DANGER!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.2 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with or starting the device.
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device must be operated in correct and safe technical condition only. In case of operational problems disconnect the device from the power supply (pull the plug from the socket) and contact the service company.

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.

- Check the power cord regularly for damage. Do not use the device if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



HOT SURFACE! Risk of burns!

To avoid the hazard results please follow the safety instructions below.

- The body and surface of the device become hot during operation! To prevent burns to fingers and hands do not touch hot surfaces of the device! During operation only touch the designated handles and switches.

- The device remains hot for some longer time even after it has been switched off. Thus, let it cool down sufficiently before you start cleaning it.
- During heating-up, the plates with food become very hot. Use protective gloves, kitchen towels or napkins to remove the plates.



WARNING! Risk of fire or explosion!

To avoid the hazard results please follow the safety instructions below.

- To avoid the fire hazard and damage to the device never place the kitchen utensils, towels, paper, etc. on the warming plate.
- Never use the device near flammable or inflammable materials (such as alcohol, spirits, petrol etc). High temperature may cause their evaporation and due to contact with the ignition sources the deflagration may occur, and it may result in personal injuries and material damage.
- In case of fire and before taking relevant fire extinguishing action, disconnect the device from the electric power supply (unplug!). **Caution:** Do not spill water on the device which is still energised. Electric shock hazard!

1.3 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The device is not designed for continuous operation in the industrial applications.

The device is intended for home use or in similar places such as:

- in kitchens for store or office employees or in similar business areas;
- in agricultural farms;
- by guests of hotels, motels and other typical places of accomodation;
- in Bed and Breakfast facilities.

The **warming tray** is intended for **keeping food warm** using appropriate cookware.

The **warming tray** must not be used for:

- heating of rooms
- heating-up of flammable, health hazardous and easily evaporating liquids and materials, etc.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.

4. Technical data

4.1 Overview of parts

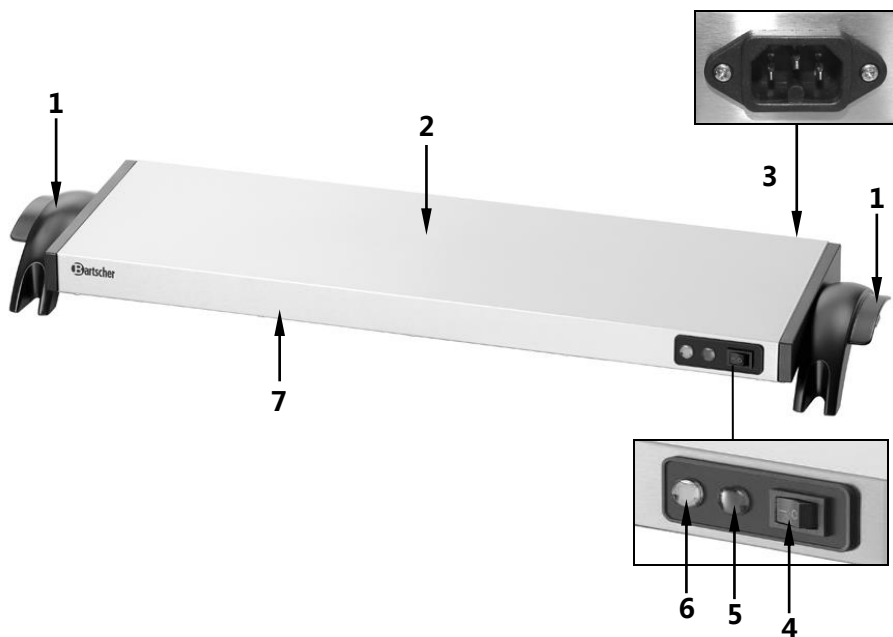

- 1 Stand with handle (2)
- 2 Surface
- 3 IEC connector
- 4 ON/OFF switch
- 5 Heating indicator light (red)
- 6 Ready for operation indicator (green)
- 7 Body

4.2 Technical specification

Name	Warming tray
Code-No.:	A114365
Material:	Stainless steel
Realization:	<ul style="list-style-type: none">▪ GN size: GN 1/1▪ Thermostat▪ Overheating protection▪ ON/OFF switch▪ Detachable cable set▪ Indicator lights: heating-up, ready for operation
Heating-up time:	7 minutes (100 °C)
Warm-keeping time:	max. 37 minutes
Power supply:	1.2 kW / 220-240 V~ 50/60 Hz
Dimensions:	W 730 x D 215 x H 62 mm
Size of surface:	W 600 x D 200 mm
Weight:	3.5 kg

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove and dispose of all package materials according to the environment protection regulations.
- Before starting operation, remove the protective film from the device. Remove the film slowly in order not to leave the glue residues. Any glue residues may be removed with use of a suitable solvent.



CAUTION!

Never remove the nameplate and warning signs from the device.

- Put the device on an even, stable, dry and waterproof surface which is resistant to high temperature.
- **Never** place the device on an inflammable surface.
- **Never** place the device at the edge of a table to avoid tilting or falling.
- **Never** put the device in a moist or wet area.
- Do not place the device near open flame, electric heaters or other heat source.
- Place the device so that the plug is easily accessible so as to quickly disconnect the device if the need arises.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation! Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

- The power supply circuit with the socket must be protected by the fuse of at least 16A. Connect the device directly to a single grounded socket. Do not use any power bar or multiple socket.

5.2 Operation

- Before use, clean the device according to the instructions in section 6 “Cleaning”.
- First, connect the supplied power supply cable to the IEC connector at the rear side of the device, then plug in the device to the single grounded socket.
- Turn the device on using the ON/OFF switch located on the front of the device. The device will heat-up automatically to the maximum temperature of approx. 100 °C. Heating-up time is approx. 7 minutes.
- During heating-up the red heating-up indicator light is on. When the temperature has been reached, the red heating-up indicator light is off and the green ready for operation indicator light is on. The device is now ready to maintain the food temperature.
- When the temperature of the warming plate falls below 95 °C, the green ready for operation indicator light is off, the thermostat turns on and the device is heated-up again. The red indicator light comes on again. Due to this function the warming tray is protected against overheating.



HOT SURFACE! Risk of burns!

External surfaces of the device become very hot during its operation. Do not touch the hot surfaces! Move the device using only the side handles.

- When the green ready for operation indicator light comes on, you can disconnect the device from the power supply, detach the power supply cable and leave the device in a required place. Even disconnected from the power supply, the warming plate emits heat still for approx. 37 minutes.



CAUTION!

The warming tray is not designed for keeping warm the food placed directly on the surface. Use suitable plates to keep the food warm.

- Before you place the food on the warming plate make sure that it is positioned on a flat and stable surface to prevent sliding down or falling over of the food cookware.



- The most suitable for keeping the food warm is the cookware with a flat bottom and not very high sides. High sides cause significant heat loss. Food stays warm for much longer when covered.
- Put the warm food on suitable plates and place them on the warming surface.
- To prevent damage to the valuable stainless steel surface place the plates and bowls carefully and do not slide them along the plate. Porcelain, etc, may scratch the surface.



CAUTION!

**Never move the warming tray with food on top of it. Remove the food first!
Use protective gloves when moving hot containers.
To move the warming tray use the designated handles.**

- If you plan not to use the device for some time, switch it off using the ON/OFF switch, unplug it and finally detach the power cable.

6. Cleaning



WARNING!

Before cleaning, switch the device off by pressing ON/OFF switch, disconnect it from the power supply (unplug!) and leave to cool off.

The device is not suited for direct washing via water jets. Protect the device from water penetration.

- Clean the device regularly.
- **Never** use abrasive and aggressive cleaning agents, or liquids including bleach or alcohol.
- Clean the warming plate with a soft, damp cloth.
- Use only a soft cloth. **Never** use other cleaning agents that could scratch the unit.
- Use a soft, dry cloth to dry and polish the cleaned device.

Storing the device

- If the device is not used for a long time, clean it according to the above description and store in a dry, clean place, protected against cold, sun and, children. Do not place any heavy objects on the device.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal.

For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.