Bartscher



A500405

Bartscher GmbH Franz-Kleine-Str. 28 D-33154 Salzkotten Germany Phone: +49 5258 971-0 Fax: +49 5258 971-120 **Service hotline:** +49 5258 971-197 www.bartscher.com



Version: 1.0 Date of preparation: 2023-02-24

Original instruction manual

Bartscher

Technical Data

Name:	Buffet display double
Art. No.:	A500405
Colour:	white
Material:	plastic
Hood version:	detachable, plexiglas
Number of levels:	2
Operation:	on both sides
Dimensions (W x D x H), in mm:	470 x 315 x 415
Weight, in kg:	3,1

We reserve the right to implement technical modifications.

Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Storing suitable cakes, snacks and similar food products.



Unpacking

1. Unpack the buffet display and remove the packing material observing environmental regulations in force.

CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

Equipment Included


1. Check completeness of delivery following the figure below:

X2



ΕN



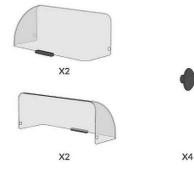





Assembly

1. Assemble the buffet display using the following figures.





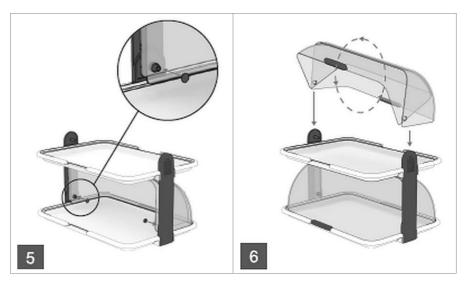

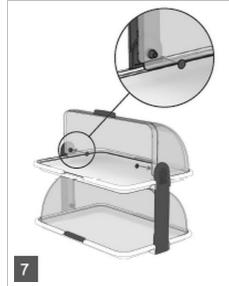

EN

Bartscher

Before Use

- 1. Before use, clean the buffet display thoroughly observing indications in section **'Cleaning'**.
- 2. To end with, dry all cleaned parts with a soft dish-cloth.

Indications for User

- Place the buffet cabinet on an even surface.
- Do not locate the buffet cabinet in a place exposed to the direct sunlight.
- Use the buffet display to display cakes, snacks and similar food products in selfservice areas.
- Do not store perishable products in the buffet cabinet.

ΕN



Cleaning

ATTENTION!

For cleaning, do not use any scouring agents containing solvents nor corrosive cleaning agents. They may damage the surface.

- 1. For cleaning, disassemble all components of the buffet display.
- 2. After use and in the meantime, should it be needed, clean the buffet display with warm water, a mild cleaning agent and a soft cloth. For cleaning, remove all components of the buffet display.
- 2. After use and in the meantime, should it be needed, clean the buffet display with warm water, a mild cleaning agent and a soft cloth.
- Thoroughly dry all cleaned elements.
 NOTE!
 Components of the buffet display are dishwasher-safe.
- 4. Clean the buffet display regularly with food-grade disinfectant.