



850008

**Seifenspender
für Wandmontage**

D/A/CH

**Wall-mounted
soap dispenser**

GB/UK

**Distributeur de savon
pour montage mural**

F/B/CH

**Dispenser per sapone
da montare a parete**

I/CH

**Dispensador de jabon
para montaje en pared**

E

**Dispensor de sabonete
para montagem na parede**

P

**Zeepdispenser
voor wandmontage**

NL/B

**Sæbedispenser
til vægmontage**

DK

**Настенный дозатор
для жидкого мыла**

RUS

**Duvara monte edilen
sivi sabun dispenseri**

TR

**Dozownik do mydła
do montażu naściennego**

PL

**Davkovač mydla
pro montáž na stěnu**

CZ

**Zidni dozator
tekućeg sapuna**

HR

**Falra szerelhető
szappanadagoló**

H

**Συσκευή υγρού σαπουνιού
για επιτοίχια ανάρτηση**

GR

Technical information:


Name:	• Wall-mounted soap dispenser
Article number:	• 850008
Material:	• Housing: aluminum; tank: plastic
Capacity:	• 1 liter
Dimensions:	• W 95 x D 222 x H 330 mm
Weight:	• 0.65 kg
Equipment:	• wall holder and fastening materials

Soap not included!

Properties

- Perfect for public toilets in food service, hotels, airports, etc.
- Hygienic dispensing of common liquid soaps by hand or elbow.
- Manual pump system requires no cartridge
- Plastic tank with fill level indicator
- Easy to maintain

Diagramm of parts

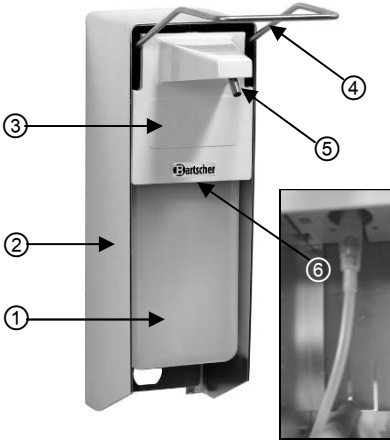

- ① Soap tank
- ② Housing
- ③ Front cover
- ④ Pump handle
- ⑤ Soap nozzle
- ⑥ Hose

Installation

- Unpack the soap dispenser and fastening materials, and remove all packing materials.
- Mount the soap dispenser near a sink for easy accessibility. Follow the instructions below:



- 1 Press the soap tank up and pull it to the front of the housing. Fill the tank with commercially available liquid soap.




- 2 Free the wall mount on the housing by pressing it in then down.




- 3 Disconnect the wall mount from the soap dispenser.



4 Mark and drill 3 holes in the wall at the desired height.

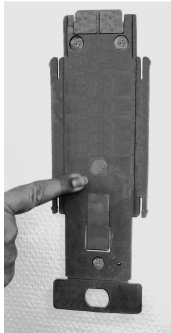

5 Place the supplied spring pins in the holes. Fix the wall mount using the supplied screws.

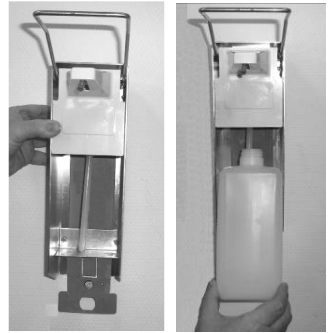


6 Next, hang the housing of the soap dispenser on the wall mount.

7 Insert the hose into the soap and slide the tank up until it rests securely on the lower support.

Filling the dispenser / using the dispenser

- To fill the dispenser, press the tank up and pull it forward. Fill it, then replace it in the housing.

- Soap can be dispensed by pressing the pump either by hand or elbow.

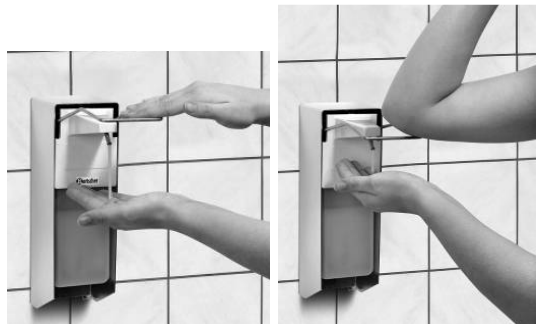

Cleaning

- Clean the soap dispenser with a soft, moist cloth.
- **Never** use harsh cleaning substances that could scratch the surface.
- After cleaning, dry and polish the surface with a dry cloth.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120