


## **AGN1000-1/1**

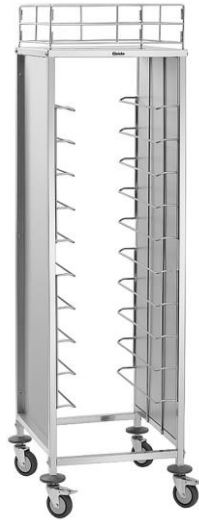

**300186**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0  
Fax: +49 5258 971-120  
**Service hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)

Version: 1.0

Date of preparation: 2022-12-22

**Original instruction manual**

## Technical Specifications

|  |                                       |
|--|---------------------------------------|
| <b>Name:</b>   | <b>Gastronorm trolley AGN1000-1/1</b> |
| Art. No.:  | <b>300186</b>                         |
| Material:  | stainless steel                       |
| Number of guide rail pairs:                            | 10                                    |
| Distance between guide rail pairs, in mm:              | 120                                   |
| Load-bearing capacity per guide rail pair, max. in kg: | 10                                    |
| Dimensions of utility surface (W x D), in mm:          | 480 x 540                             |
| Load-bearing capacity of utility surface, max. in kg:  | 10                                    |
| Total load-bearing capacity, max. in kg:               | 80                                    |
| Number of swivel casters:                              | 4                                     |
| Locking swivel casters:                                | 2                                     |
| Diameter of casters, in mm:                            | 100                                   |
| Number of caster dampers:                              | 4                                     |
| Material of caster dampers:                            | plastic                               |
| Dimensions (W x D x H), in mm:                         | 580 x 685 x 1840                      |
| Weight, in kg:   | 28                                    |

We reserve the right to implement technical modifications.

## Version / Characteristics

- Version: GN guides
- Area of application: clearing
- May be loaded from both sides
- Utility surface
- Delivery condition: Self-building kit, easy assembly
- The set does not include:
  - GN containers
  - sheets
  - grates

## Intended Use






As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.










The following is an intended use:

- Clearing and transporting food in GN containers, on grates and trays up to GN 1/1 size.
- Storage of dishes in suitable containers.

## Scope of Delivery / Part Name

- Unpack the Gastronorm trolley and remove the packing material pursuant to environmental regulations.
- Check completeness of delivery according to the list below:

| Component   | Number | Name  |
|---|--------|---|
|   | 2      | Lateral section with 10 preinstalled guide rails and a lateral wall |
|  | 1      | Display area  |
|  | 2      | Lateral railing   |
|  | 2      | Front and rear railings   |
|  | 2      | Crossbar  |

|   |   |   |
|---|---|---|
|  | 1 | Allen wrench  |
|  | 8 | M8*55 bolt  |
|  | 4 | Square washer   |
|  | 4 | Damper for swivel caster                                    |
|  | 2 | Locking swivel caster                                       |
|  | 2 | Non-locking swivel caster                                   |
|  | 4 | M5*10 bolt (already fixed in a factory to lateral sections) |
|  | 8 | M5 nut  |
|  | 4 | M8 round washer   |

## Assembly

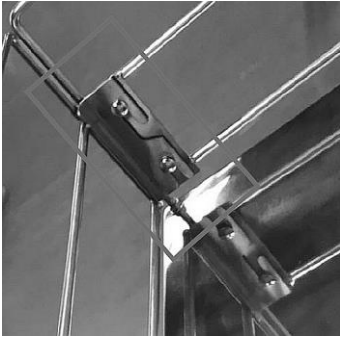


Fig. 1

1. Fix the 2 shorter railing grilles at the front and rear of the working surface. Use the enclosed M5 nuts and washers.
2. Hook the 2 longer railing grilles onto the pins of the grille at the front and rear.

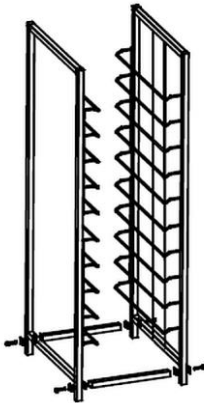


Fig. 2

3. Assemble 2 crossbars (at the bottom) to the lateral section of the Gastronorm trolley.
4. Place the square washer on the outside of each lateral section. Screw crossbars together with square washers using M8x10 bolts and tighten them with Allen key.
5. Connect crossbars (at the bottom) with the second lateral section, using washers and nuts, as described above.

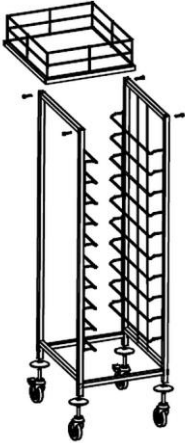


Fig. 3

6. Place the Gastronorm trolley on its side.
7. Mount 4 swivel caster dampers onto square tubing of lateral sections.
8. Finally, screw swivel casters into square tubing of lateral sections.
9. Set the Gastronorm trolley on swivel casters.
10. Insert folded shelves with railing (point 1, 2) on the Gastronorm trolley frame.
11. Screw the shelf with railing to the Gastronorm trolley frame using M8 bolts with M8 round washers and tighten them with Allen key.

## Setting

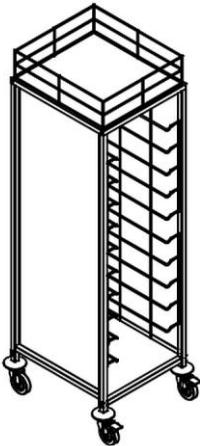


Fig. 4

1. Check the stability of the Gastronorm trolley.
2. Level the Gastronorm trolley through screwing in and out swivel casters.
3. After setting the Gastronorm trolley in a designated place, lock 2 swivel casters with lockings to prevent accidental relocation or overturn of the Gastronorm trolley.

## Gastronorm Trolley Loading



EN

Fig. 5

The Gastronorm trolley can be loaded from both sides.

1. Place the required number of suitable trays, GN containers, etc. in guides.
2. Place jugs, cups, glasses, etc. on the top shelf.

The shelf railings prevent dishware from falling down.

## Cleaning

### **ATTENTION!**

**Scrubbing agents, washing agents with solvents or caustic substances may damage the surface.**

For cleaning, use only agents suitable for stainless steel.

1. Clean the Gastronorm trolley regularly with warm water and a soft, damp cloth. Use a mild cleaning agent if required.
2. Dry the Gastronorm trolley with a soft cloth.