

TS 210



A300056

Bedienungsanleitung
Servier- / Transportwagen

D/A/CH

Instruction manual
Serving- / transport trolley

GB/UK

Mode d'emploi
Chariot de service / transport

F/B/CH

Manuale di utilizzo
Carrello portavivande / da trasporto

I/CH

Instrucciones de uso
Carro de servicio / de transporte

E

Manual de instruções
Carrinho para servir / transporte

P

Gebruiksaanwijzing
Serveer- / transportwagen

NL/B

Bedieningshandleiding
Serverings- / transportvogn

DK

Инструкция по эксплуатации
Сервировочная / транспортная тележка

RUS

Kullanma kılavuzu
Servis ve nakliye arabası

TR

Instrukcja obsługi
Wózek do serwowania / transportowy

PL

Návod k obsluze
Servírovací / transportní vozík

CZ

Upute za upotrebu
Kolica za posluživanje / transport

HR

Használati útmutató
Tálaló- és szállítókosci

H

Οδηγίες χρήσης που
Καρότσι σερβιρίσματος / μεταφοράς

GR

PRODUCT DESCRIPTION

Name:	<ul style="list-style-type: none"> • Serving- / transport trolley TS 210, with 2 shelves and extra deep clearing basin
Code-No.:	<ul style="list-style-type: none"> • A300056
Material:	<ul style="list-style-type: none"> • Chrome-nickel steel
Construction:	<ul style="list-style-type: none"> • 4 swivel castors, 2 with brake
Dimensions:	<ul style="list-style-type: none"> • W 920 x D 600 x H 945 mm
Shelf size:	<ul style="list-style-type: none"> • W 830 x D 510 mm
Clearing basin inside:	<ul style="list-style-type: none"> • W 760 x D 440 mm, 100 mm deep
Maximum load:	<ul style="list-style-type: none"> • 120 kg
Distance between shelves:	<ul style="list-style-type: none"> • Upper 270 mm; lower 265 mm
Weight:	<ul style="list-style-type: none"> • 14.1 kg

Unit includes / Parts names



2 x shelf



1 x clearing basin



2 x frame



2 x swivel castors without brake



2 x swivel castors with brake



12 x M8 screw



12 x washer



12 x nut



4 x bumper



1 x Allen key




1 x wrench

ASSEMBLY


1. Unpack the unit's parts and ensure all of them are present.
Remove all packing material.

2. Start assembly of the trolley by fixing the shelf to the frame and the clearing tray.

Screw in the shelves and clearing tray using the included Allen key, beginning with the washers and nuts.

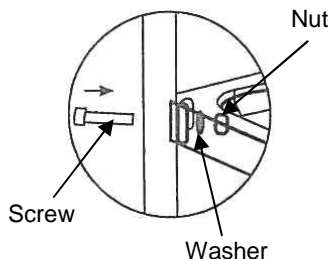

3. Turn the trolley upside-down and screw the swivel castors into the frame. Place the bumpers above the castors.

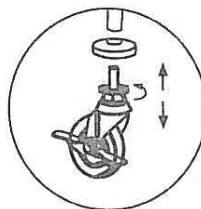

4. Carefully place the trolley on the ground and ensure all the castors are touching the floor. Turn the screws tightly with the Allen key. Use the wrench included to turn the nuts tightly.
5. The height of the wheels can be regulated as needed using the hex nuts.



NOTE!

Remove the protective film after assembly!

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120