

**S2-200**



**110904**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

**Technical Support Hotline:** +49 5258 971-197

[www.bartscher.com](http://www.bartscher.com)



Version: 1.0

Date of preparation: 2022-11-30

---

## Original instruction manual

1	Safety .....	2
1.1	Explanation of Signal Words .....	2
1.2	Safety instructions.....	3
1.3	Intended Use .....	6
1.4	Unintended Use .....	6
2	General information .....	7
2.1	Liability and Warranty .....	7
2.2	Copyright Protection .....	7
2.3	Declaration of Conformity .....	7
3	Transport, Packaging and Storage .....	8
3.1	Delivery Check.....	8
3.2	Packaging .....	8
3.3	Storage .....	8
4	Technical Data.....	9
4.1	Technical Specifications .....	9
4.2	Functions of the Appliance.....	10
4.3	List of Components of the Appliance .....	11
5	Installation and operation .....	12
5.1	Installation.....	12
5.2	Operation .....	14
6	Cleaning and Maintenance .....	20
6.1	Safety Instructions for Cleaning .....	20
6.2	Cleaning.....	20
6.3	Maintenance .....	21
7	Possible Malfunctions.....	23
8	Disposal.....	26



**Read this instruction manual before using and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

## 1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

### 1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



**DANGER!**

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



### **WARNING!**

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



### **CAUTION!**

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

### **IMPORTANT!**

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

### **NOTE!**

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

## 1.2 Safety instructions

### Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

### **Fire hazard / flammable materials hazard / explosion hazard!**

- Do not use any electric devices in the appliance.
- Do not store nor use petrol or other flammable liquids and gases in the vicinity of this or any other appliance. Those gases may cause fire or explosion hazard.
- Do not put into the appliance any explosive materials, like sprays filled with flammable propellants. Contents of containers filled with flammable gases and liquids may leak in low temperatures, and the contents may catch fire from sparks generated by an electric appliance. Explosion hazard!
- In the case of coolant leakage, pull the plug from the socket. Remove all sources of ignition in the vicinity, ventilate room and contact technical service. Avoid coolant getting in contact with eyes, as it may cause serious eye damage.
- Never use any flammable liquids for cleaning the appliance or its parts. Gases released may cause fire or explosion hazard.
- In the case of fire, disconnect the appliance from the power supply before attempting adequate fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.
- Defrosting process may not be sped up with mechanical means or heat energy sources (candles or heaters) nor with any other means. Vapour produced may cause short-circuit and too high temperatures may damage the appliance.
- All ventilation slots should not be obstructed during operation.
- Never attempt to damage cooling installation of the appliance.

### **Operating Personnel**

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

### Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.
  
- Do not drill hole in the appliance nor install any objects on it.
- Do not place any heavy objects on the appliance.

## 1.3 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Cooling of suitable food products.

The appliance is intended for operation in maximum ambient temperature of 30°C and relative humidity of 55%.

## 1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Storing flammable or explosive objects and liquids, such as ether, petroleum or adhesives;
- Storing explosive materials, like sprays filled with flammable propellants;
- Storing pharmaceutical products or preserved blood;
- Storing live pets.



## 2 General information

### 2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

The warranty period for this appliance is 24 months, counted from the purchase date.

EN

### 2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

### 2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

### 3 Transport, Packaging and Storage

#### 3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint.

Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

#### 3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

#### 3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

## 4 Technical Data

### 4.1 Technical Specifications

<b>Name:</b>	<b>Sub-counter chiller S2-200</b>
Art. No.:	<b>110904</b>
Material:	stainless steel
Worktop material:	stainless steel
Number of drawers:	2
Drawer Gastro Norm:	1/1 GN
Drawers dimensions (W x D x H), in mm:	300 x 525 x 315
Temperature range, min.–max., in °C:	2 - 8
Amount of coolant, in kg:	R290   0,060 kg
Climate class:	5
Energy efficiency class:	A
Energy consumption, in kW/year:	457
Connected load:	0,4 kW   230 V   50 Hz
Dimensions (W x D x H), in mm:	1200 x 660 x 657
Weight, in kg:	91,2

We reserve the right to implement technical modifications.


## Version / Characteristics

- Cooling: circulating air
- Refrigerated drawers
- Temperature control: in 1°C increments
- Thermostat
- Control: electronic
- Digital display
- ON/OFF switch
- Evaporation of condensed water
- Height-adjustable feet: in the range of 657–745 mm

## 4.2 Functions of the Appliance

Food products or meals prepared in suitable containers may be cooled and stored through a specified time with suitable temperature settings.

### 4.3 List of Components of the Appliance

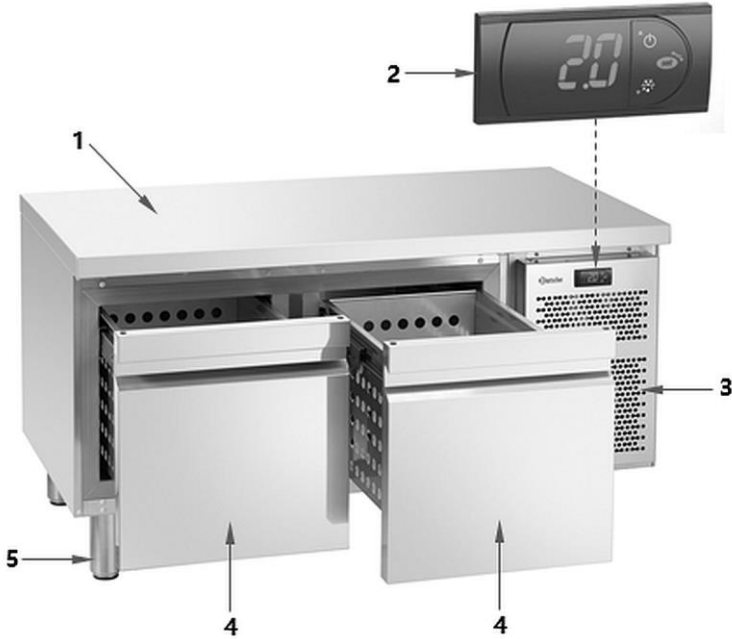

EN

Fig. 1

- 1. Housing
- 2. Digital temperature controller
- 3. Ventilation openings
- 4. Drawer (2 pcs)
- 5. Height-adjustable feet (4 pcs)

## 5 Installation and operation

### 5.1 Installation



#### CAUTION!

**Incorrect installation, positioning, operation, maintenance or misuse of the appliance may lead to personal injury or property damage.**

Positioning and installation, as well as repairs may be performed by authorised technical service only and in compliance with the applicable national law.

#### NOTE!

**The manufacturer disclaims all liability and provides no warranty for damages, which may be attributed to non-observance of regulations or incorrect installation.**

EN

### Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



#### CAUTION!

#### Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
  - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;

## Installation and operation

---

- sufficiently large, and thus enabling usage of the appliance with no problems;
  - easily accessible;
  - well ventilated.
- Do not place the appliance in direct sunlight or in the vicinity of heat sources (cooker, radiator, heating devices, etc.). Heat sources may negatively affect power consumption, and restrict functions of the appliance, too.
  - Place the appliance so that sufficient air circulation is ensured. Do not block nor cover ventilation openings in the rear wall of the appliance.
  - Leave at least 10 cm clearance from walls and other objects.
  
  - In order to avoid damage to the compressor, do not tilt the appliance more than 45° when positioning or transporting it.
  
  - To install the appliance, perform the following steps:
    - Remove the packaging of the appliance, except for the pallet.
    - Lift the appliance with the lift truck and move it to the planned installation location. Be careful not to damage the appliance. Control the stability in order not to lose the balance of the appliance.
    - Do not drag nor push the appliance, as it may fall down. This may also cause the damage to external elements or feet.
    - As soon as the appliance is in the planned installation location, remove the pallet.
    - Level the appliance by screwing in or out the feet.
    - Remove the protective film from the appliance at the end.

### Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
  
- When the electrical connection is established, check that the supply voltage during appliance operation does not deviate by  $\pm 10\%$  from the nominal value indicated on the rating plate.
- The power cord used for the mains connection is of H05VV-F type; when replacing it, use a cord with the same or superior characteristics.
- When replacing the power cord, the protective conductor must be longer than the active conductors.
- Replacement of a damaged power cord must be carried out by a qualified technician to avoid potential hazards.
  
- Prior to first use, the appliance should be installed and left standing upright for at least 2 hours, before it is connected to power supply.
- After a power failure or when the plug is removed from the socket, do not reconnect the appliance to power supply for at least 5 minutes.

## 5.2 Operation

### Tips for the User

- Fill the refrigerated counter only when the digital display shows that the required temperature has been reached.
- Do not fill the refrigerated counter with warm food products nor liquids, as well as uncovered food products.
- Use seal-tight containers for storing food products and beverages, to protect the aromas of the food products and beverages and avoid mixing the aromas inside the refrigerated counter.
- During the first filing or full filling of refrigerated counter always open and fill only one cabinet to avoid tilting of the appliance.
- While placing food products in the refrigerated counter keep in mind that sufficient space must be maintained between the internal walls of the device and stored food products to assure free circulation of air inside the appliance.
- The more items in the refrigerated counter, and the longer the doors/drawers are kept open, the higher the energy consumption.



## Installation and operation

---

- To limit loss of cold air minimize the opening time of doors/drawers. Moreover, the doors/drawers should not be opened too often.
- To avoid occurrence of unpleasant odour in the device follow the recommended storage periods of food products.

### Appliance Preparation and Start-Up

1. Before use, clean the appliance and accessories thoroughly, following indications in section 6 '**Cleaning and Maintenance**'.
2. Then dry the appliance thoroughly.
3. Plug the appliance into a suitable single socket.
4. Switch the appliance on by pressing the ON/OFF switch on the temperature controller for a few seconds.

The digital display shows 'ON'.

5. Switch the appliance on (without food products). Follow indication in the subsequent sections of the instruction.
6. Before first use and before putting any food products into the drawers, the appliance should reach the set temperature.

## Control Elements / Indicator Lights

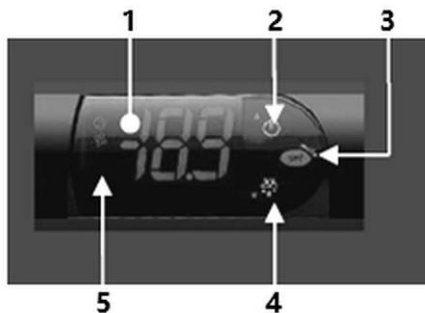



Fig. 2

1. Digital display
2. ON/OFF switch
3. SET function key
4. Manual defrosting key
5. Operating mode LED indicator lights


### 2-3-4 — temperature change keys

## Functions

### Switching the Temperature Controller ON/OFF


1. To switch the temperature controller on, press the ON/OFF switch on the temperature controller for a few seconds. .



When the key is pressed, ON appears in the digital display.

2. To switch the appliance off, press and hold the  key for 3 seconds.

When switched off, OFF and the current temperature appear alternately in the digital display.

### Setting the Operating Temperature

The temperature set during the factory check test can be displayed by pressing the  key.

This temperature is displayed for 5 seconds. During this time, it can be changed using, both, the  and  keys.

## Installation and operation

If neither of these keys is pressed for 5 seconds, the digital display shows the temperature of the cooling chamber again.

The user can set the internal temperature of the cooling chamber in the range of maximum temperature to minimum temperature. These are indicated at the top of the door.


### Defrosting

The digital temperature controller automatically controls the defrosting of the evaporator. The defrosting process is indicated by the corresponding LED indicator light.

No loading or unloading of the cooling chamber should take place during the defrosting phase.

A relevant probe controls the end of the defrosting process.

Under particularly difficult operating conditions (high room temperature and humidity, or after inserting food with high humidity), several additional defrosting

operations should be carried out manually. To this end press and hold the  key for a few seconds.




EN

### LED Indicator Lights

The following LED indicator lights appear in the digital display:



This LED indicator light shows the status (ON or OFF) of the COMPRESSOR

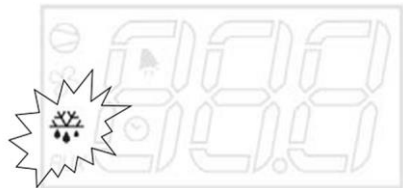

This LED indicator light indicates that a defrosting process is taking place




This LED indicator light shows the status (ON or OFF) of the FAN



This LED indicator light shows the pre-alarm status

### Switching the Appliance OFF








1. If the appliance is not to be used any more, switch it off by pressing and holding the ON/OFF switch for three seconds. .  
The digital display shows 'OFF'.
2. Disconnect the appliance from the mains socket (pull the plug out).


### Parameter Programming

The operating parameters that can be modified using the keys on the temperature controller; they are divided into two groups: frequently used parameters (type F) and configuration parameters (type C).













Access to the configuration parameters is password protected (default = 22) to prevent accidental changes or unauthorised interventions.

#### Access to F Parameters:

- Press and hold the  key for at least 3 seconds (silencing the buzzer in case of an alarm). The digital display shows the parameter code 'PS' (password).
- Scroll through the parameters using the  and  keys. The LED indicator light of the parameter affiliation category appears in the digital display.
- Press the  key to display the associated value.
- Increase or decrease the value using the  and  keys.
- Press the  key to temporarily store the new value and return to the parameter level.
- Repeat the procedure for the parameters that remain to be modified.


- To finally save the parameters and exit the modification procedure, hold the  key down for at least 3 seconds.

### Access to F Parameters:

- Press and hold the  key for at least 3 seconds (silencing the buzzer in case of an alarm). The digital display shows the parameter code 'PS' (password).
- Use the  key to select the password level.
- Use the  and  keys to scroll through the numbers up to 22 (parameter access password).
- Confirm the password with the  key.
- Scroll through the parameters using the  and  keys. The LED indicator light of the parameter affiliation category appears in the digital display.
- Press the  key to display the associated value.
- Increase or decrease the value using the  and  keys.
- Press the  key to temporarily store the new value and return to the parameter level.
- Repeat the procedure for the parameters that remain to be modified.
- To finally save the parameters and exit the modification procedure, hold the  key down for at least 3 seconds.

### NOTE!

**If no key is pressed for 60 seconds, all parameter changes temporarily stored in RAM will be discarded and previous settings will be restored.**

**If the power supply to the appliance is interrupted before saving (pressing the  key for 3 seconds), all parameter changes entered and temporarily stored will be lost.**

## 6 Cleaning and Maintenance

### 6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.
  
- Do not use iron wool nor iron brushes to clean stainless steel, as these can leave iron particles on the surface of the appliance which, due to oxidation, lead to the formation of rust.

EN

### 6.2 Cleaning

1. Clean the appliance regularly.
2. Use a wooden or plastic spatula, or soft cleaning sponge to remove the dried remains.
3. Remove all objects from the appliance and store them temporarily in a cool room or in a refrigerator.
4. Clean the drawers on the inside with warm water, a food-grade disinfectant and a soft cloth or sponge.
5. Wipe with a cloth moistened in fresh water.
6. Wipe the housing of the refrigerated counter and drawers from inside and worktop with a soft, damp cloth. Use a mild cleaning agent when required.
7. Finally, dry the cleaned surfaces and elements thoroughly with a soft cloth.
8. Wash the used GN containers in warm water with a neutral cleaning agent. Rinse thoroughly with fresh water and dry afterwards.
9. If the appliance is not to be used for long time, all stainless steel surfaces should be coated with a protective layer using a cloth soaked in Vaseline and the premises should be aired regularly.

### 6.3 Maintenance

- Extraordinary maintenance operations must be carried out by qualified technical personnel equipped with the required personal protective equipment.
- It is prohibited to remove or tamper with protective and safety devices when the appliance is switched on.
- Refilling of the refrigerant and elimination of gas leaks must only be carried out by personnel who meet all the requirements of the relevant regulations of the country in which the appliance is used.
- In the case of flammable refrigerants or other hydrocarbons, the appliance must be disconnected from the power supply and the refrigerant circuit must be completely cleaned using inert gas before welding or other work involving flames or sparks.
- If a dangerous situation is detected, e.g. damage and danger from sharp-edged parts, damage to electrical or thermal insulation, the appliance must not be started up or used and must be secured as soon as possible, with access to its surroundings prevented if necessary.
- To ensure that the appliance remains functional for a long time, the following operations should be carried out regularly by a qualified specialist:
  - clean the condenser, gently moving a vacuum cleaner suction nozzle for upholstered furniture or a soft brush along the condenser ribs;
  - clean the condensate evaporation tray;
  - check electrical cables at the connectors for loose connections;
  - check the operation of the temperature controller, control board and probes if applicable;
  - check the operation of the electrical system.

### Maintenance Intervals

In order to ensure consistent performance of the appliance, the checks listed in the table below must be carried out at the specified frequency:

Type designation	Description	Frequency
Normal cleaning	General cleaning of the appliance, from inside and outside	daily
Mechanical protections	Checking the condition of external mechanical parts for deformation, loosening or removal	once a month
Operation	Check mechanics Check for cracks, deformation Check bolts for tightness Check condition of stickers and hazard/information symbols	annually
Structure of the appliance	Check condition of tightness of bolts, main fasteners, etc.	annually
Safety signage	Legibility and condition of signage	annually
Electrical control cabinet	Check condition of electrical components and wiring between switchboard and electrical components	annually
Connection cable, plug, electrical socket	Check condition of components (replace if necessary)	annually
General inspection of the appliance	Complete general inspection of the appliance	every 10 years



## 7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. When malfunction cannot be removed, contact the technical service.

In such a case, provide article number, model name and serial number. These data may be found in the rating plate.

<b>Error</b>	<b>Possible Cause</b>	<b>Solution</b>
Refrigeration unit does not start	Incorrectly connected plug	Remove the plug and insert it properly into a socket
	No power	Check mains plugs, sockets, fuses and mains supply
	No power supply	Check the electric power supply
	End of defrosting process	Appliance restarts after a pause of 3 seconds
	Other causes	If the problem persists, contact the service company
The refrigeration unit runs continuously, but does not cool sufficiently	Room temperature too high	Ventilate the room
	Direct sunlight or heat sources in immediate vicinity	Move the appliance away from heat sources
	Appliance is in defrosting phase	Wait until defrosting phase is over. Check cooling capacity
	Condenser dirty	Clean the condenser
	Drawers not tight enough	Check the seals
	Insufficient refrigerant charge	Contact the service company
	Condenser fan stalls	Contact the service company
	Evaporator fan stalls	Contact the service company

Error	Possible Cause	Solution
Refrigeration unit does not turn off	Probe damaged	Contact the service company
	Thermostat broken	Contact the service company
Ice forms inside the evaporator	Clogged drain pipe	Check the cleanliness of the drain assembly, then remove and reinstall it
	The appliance is not level	Level the appliance again using the feet
	Hot gas valve defective	Contact the service company
The appliance operates loudly	Constant vibrations Contact between appliance and other objects	Maintain clearance between appliance and other objects

### Error Messages

EN


Problem		Causes	Solution
<b>E0</b>	<b>Cell probe error</b> 'E0' flashes on the digital display and an acoustic signal is heard	<ul style="list-style-type: none"> <li>• Wrong type of probe</li> <li>• Probe damaged</li> <li>• Incorrect probe–dashboard interface</li> <li>• Temperature detected by the probe above the limit of the cell probe used</li> </ul>	<p><b>Contact the service company</b></p> <ul style="list-style-type: none"> <li>• Check that the cell probe corresponds to the NTC type</li> <li>• Check that the probe is in good condition</li> <li>• Check that the dashboard–probe connection is correct</li> <li>• Check that the temperature in the vicinity of the probe does not exceed the permitted limit</li> </ul>
<b>E1</b>	<b>Evaporator probe error</b> 'E1' flashes on the digital display and an acoustic signal is heard		
<b>E2</b>	<b>Condenser probe error</b> 'E2' flashes on the digital display and an acoustic signal is heard		

## Possible Malfunctions

Problem		Causes	Solution
<b>E3</b>	<b>Refrigerant alarm</b> 'E3' flashes on the digital display and an acoustic signal is heard	The refrigeration system is not cooling	<b>Contact the service company</b>
<b>Con</b>	<b>Clean the condenser</b> 'Con' flashes on the digital display and an acoustic signal is heard	Capacitor maintenance report	Clean the condenser To reset the internal counter, enter password <b>52</b> (see chapter 'Parameter Programming')
<b>CHt</b>	<b>Condensation high temperature alarm</b> 'CHt' flashes on the digital display and an acoustic signal is heard	The condenser temperature has exceeded the entered limit	<b>Contact the service company</b> <ul style="list-style-type: none"> <li>• Ventilate the room</li> <li>• Clean the condenser</li> <li>• Check correct operation of fans</li> </ul>

## 8 Disposal

### Electrical Appliance

	<p>Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.</p>
---	---

Electrical appliances should be returned to designated collection points.

### Coolant

The propellant used in the appliance is flammable. It should be utilised pursuant to national regulations in force.