

235L



700835

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 1.0

Date of preparation: 2021-10-25

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words.....	2
1.2	Safety instructions.....	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check.....	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data.....	9
4.1	Technical Specifications	9
4.2	List of Components of the Appliance	11
4.3	Functions of the Appliance.....	12
5	Installation and operation	12
5.1	Installation.....	12
5.2	Operation	16
6	Cleaning and Maintenance	22
6.1	Safety Instructions for Cleaning	22
6.2	Cleaning.....	22
7	Possible Malfunctions.....	24
8	Disposal.....	26



Read this instruction manual before using and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

1 Safety

EN

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Fire hazard / flammable materials hazard / explosion hazard!

- Do not use any electric devices in the appliance.
- Do not store nor use petrol or other flammable liquids and gases in the vicinity of this or any other appliance. Those gases may cause fire or explosion hazard.
- Do not put into the appliance any explosive materials, like sprays filled with flammable propellants. Contents of containers filled with flammable gases and liquids may leak in low temperatures, and the contents may catch fire from sparks generated by an electric appliance. Explosion hazard!
- In the case of coolant leakage, pull the plug from the socket. Remove all sources of ignition in the vicinity, ventilate room and contact technical service. Avoid coolant getting in contact with eyes, as it may cause serious eye damage.
- Never use any flammable liquids for cleaning the appliance or its parts. Gases released may cause fire or explosion hazard.
- In the case of fire, disconnect the appliance from the power supply before attempting adequate fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.
- Defrosting process may not be sped up with mechanical means or heat energy sources (candles or heaters) nor with any other means. Vapour produced may cause short-circuit and too high temperatures may damage the appliance.
- All ventilation slots should not be obstructed during operation.
- Never attempt to damage cooling installation of the appliance.

EN

Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

Improper Use

Safety

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

- Do not drill hole in the appliance nor install any objects on it.
- Do not place any heavy objects on the appliance.

1.3 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Freezing and storing of suitable pies, cakes, bread loaves, buns, etc.

The appliance is intended for operation in maximum ambient temperature of 10°C, up to maximum of 30°C, and relative humidity of 55% (climate class 4).

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Storing flammable or explosive objects and liquids, such as ether, petroleum or adhesives;
- Storing explosive materials, like sprays filled with flammable propellants;
- Storing pharmaceutical products or preserved blood.

2 General information

2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

The warranty period for this appliance is 24 months, counted from the purchase date.

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Bakery freezer 235L
Art. No.:	700835
Material:	stainless steel
Inner material:	stainless steel
Volume, in l:	235
Temperature range, min.–max., in °C:	-18 - -22
Amount of coolant, in kg:	R290a / 0,132
Climate class:	4
Energy efficiency class:	D
Energy consumption, in kWh/year:	1.336
GWP index:	3
Number of doors:	1
Number of guide rail pairs:	10
Guide rail dimensions (W x D), in mm:	600 x 400
Distance between guide rail pairs, in mm:	75
Max. load-bearing capacity of each shelf, in kg:	60
Connected load:	0,35 kW 230 V 50 Hz
Dimensions (W x D x H), in mm:	705 x 925 x 2.080
Weight, in kg:	143,0

We reserve the right to implement technical modifications.


Version / Design

- Colour: silver
- Cooling: circulating air
- Temperature control:
 - electronic
 - in 1°C increments
- Thermostat
- Control: touch
- Insulation: cyclopentane, 85 mm
- Automatic defrost function
- Evaporation of condensed water
- Type of guide rails: longitudinal
- Door type:
 - leaf door
 - self-closing door
- Right-hand side door, with the possibility for door hinge to be changed
- ON/OFF switch
- Indicator light: ON/OFF
- Lockable
- Internal LED lighting
- Digital display
- 1 fan
- acoustic signal if door is left open for too long

EN

More information on the appliance is available in our website www.bartscher.com or, pursuant to the Regulation (EU) 2015/1095, in our product data base at <https://energy-label.ec.europa.eu/>. Enter article number for a given model.

4.2 List of Components of the Appliance

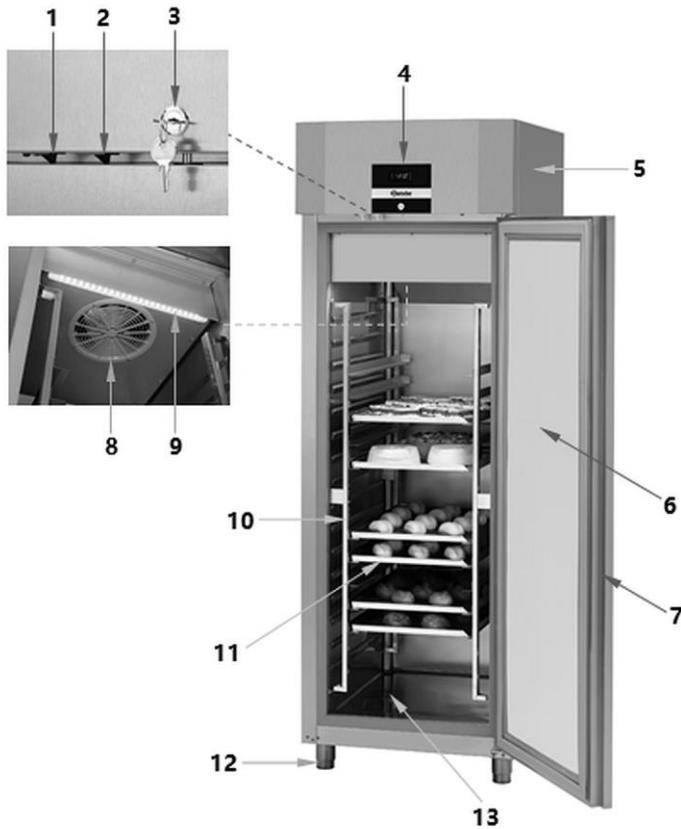

EN

Fig. 1

- | | |
|--|--|
| 1. Door contact switch for internal lighting | 2. Door contact switch for open door alarm |
| 3. Lock | 4. Digital temperature controller |
| 5. Housing | 6. Door with flush handle |
| 7. Door seal | 8. Fan |
| 9. Internal LED lighting | 10. Rack with guide rails |
| 11. Oven sheet (4 pcs) | 12. Feet (4x) |
| 13. Bottom working surface | |

4.3 Functions of the Appliance

After placing on a suitable sheet, the pre-prepared pies and cakes, bread loaves and rolls are properly frozen and stored, waiting for their turn — ready for sale or processing.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

EN

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
 - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
 - sufficiently large, and thus enabling usage of the appliance with no problems;
 - easily accessible;
 - well ventilated.
- To install the appliance, perform the following steps:
 - Remove the packaging of the appliance, except for the pallet.

Installation and operation

- Lift the appliance with the lift truck and move it to the planned installation location. Be careful not to damage the appliance. Control the stability in order not to lose the balance of the appliance.
 - Do not drag nor push the appliance, as it may fall down. This may also cause damage to external elements or feet.
 - As soon as the appliance is in the planned installation location, remove the pallet.
 - Level the appliance by screwing in or out the feet.
 - To end with, remove the protective film from the appliance.
-
- Do not place the appliance in direct sunlight or in the vicinity of heat sources (cooker, radiator, heating devices, etc.). Heat sources may negatively affect power consumption, and restrict functions of the appliance, too.
 - Place the appliance so that sufficient air circulation is ensured. Leave 10 cm clearance from walls and other objects.
 - In order to avoid damage to the compressor, do not tilt the appliance more than 45° when positioning or transporting it.
 - If the appliance is to be relocated, follow the instructions below:
 - switch the appliance off;
 - disconnect the plug from the socket;
 - take out contents of the appliance;
 - tape firmly all loose elements in the internal chamber and tape the door;
 - the appliance may only be transported in vertical position.

IMPORTANT!

The appliance is not suitable for built-in installation.


Changing the Hinge Side

- The door hinge may be changed from right to left, as needed. Observe the following figures.
- Engage at least one more person to change the door hinge side.
- The following tools are required: flat spanner No. 8 and 10, Phillips screwdriver.

ATTENTION!

Pull the mains plug out before you attempt to change the door hinge side.

Do not place the appliance in horizontal position in order to change the door hinge side.

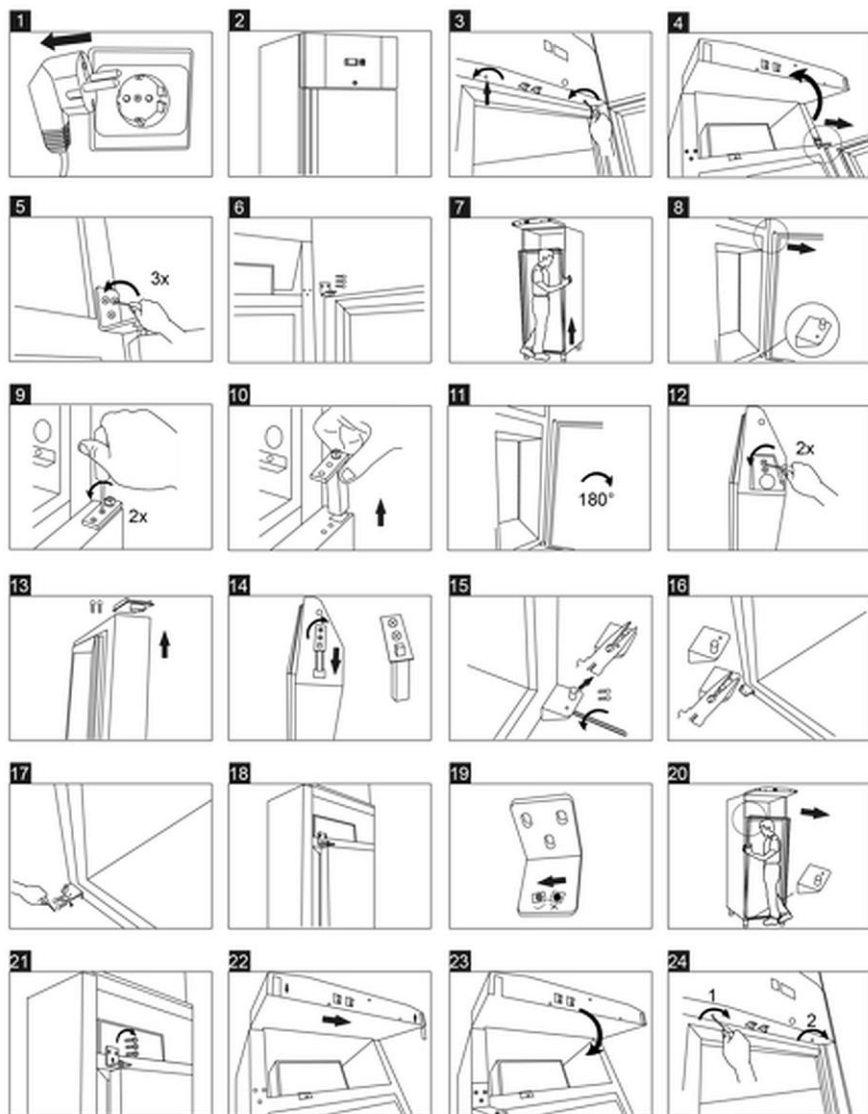

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- If the appliance was stored or transported vertically, leave it standing horizontally for 12 hours before it is connected to electric power.
- Following an electric power outage, wait at least 3 minutes before reconnecting the appliance to prevent a damage to the compressor.

5.2 Operation

Indications for User






- Deep-freeze only baked goods that are suitable to this end and withhold low temperatures well.
- Deep-freeze only fresh food products.
- Protect baked goods against thawing and refreezing, as temperature rise shortens their storage period and deteriorates their quality.
- Never freeze again any thawed or partially thawed baked goods. Such baked goods should be consumed within maximum of 24 hours.
- Observe proper indications of the manufacturers as to the freezing of given food products.
- It is best to freeze products in small portions and thaw them one by one. This caters for fast and uniform freezing and thawing. Frozen product should be described with its name and the date of freezing.
- When freezing larger amounts of fresh food products, the temperature in the appliance may rise temporarily. This does not affect the already stored food products.
- Avoid opening of appliance door during the freezing process.
- To limit loss of cold air minimize the opening time of door during operation. Also, do not open the door too frequently.
- If possible, in the event of a sudden power failure, avoid opening doors in order to avoid loss of cool air.
- If the appliance is switched off for a longer period of time, the appliance door should remain open.

Before First Use

1. Prior to first operation, clean the appliance and its equipment according to instructions in section **6 'Cleaning'**.
2. To end with, dry the appliance and accessories thoroughly.
3. Close the appliance door.
4. Plug the appliance into a suitable single socket.
5. Prior to the first use of the appliance or after a break in operation, but before you place suitable food products in the appliance, leave the appliance on to reach the right temperature.
6. When operating the appliance, follow instructions in section '**Settings**'.










Control Elements and Displayed Messages



Key	Functions
SET	Showing the set value, selection of parameters in the programming mode or confirmation of the process
	Manual start of defrosting
	Displaying the highest stored temperature, selection of parameter code in programming mode, increasing the displayed value
	Displaying the minimum stored temperature, selection of parameter code in programming mode, decreasing the displayed value
	Switching the appliance on or off
	Switching the internal LED lighting of the appliance on or off

LED Indicators

The LED indicators in the digital display show the status of the active function:

LED	Status of the active function	Meaning
	illuminates	activated compressor
	flashes	in delay
	illuminates	defrosting in progress
	flashes	defrosting delay
	illuminates	fan activated
	flashes	delay after defrosting
AUX	illuminates	connection with the digital input of the thermostat failed (wiring or components)
	illuminates	alarm is activated
	illuminates	continuous cycle active
	illuminates	Energy-saving mode active
	illuminates	degrees Celsius temperature unit indicator
	flashes	in programming mode
	illuminates	degrees Fahrenheit temperature unit indicator
	flashes	in programming mode

Settings

Switching the Appliance into ON / Standby Mode

1. Press and hold the  key pressed for 2 seconds.


The appliance switches from the ON mode into the Standby mode, and vice versa.

When the key is being held pressed, the LED blinks, signalling the change of status.

Displaying the Lowest Temperature

1. Press and release the  key.


The 'Lo' message is displayed, followed by the minimum registered temperature.

2. To restore standard display, press the  key again and hold it for 5 seconds.

Displaying the Highest Temperature

1. Press and release the  key.

The 'Hi' message is displayed, followed by the highest registered temperature.

2. To restore standard display, press the  key again and hold it for 5 seconds.

EN

Resetting the Minimum or Maximum Registered Temperature

1. Press the **SET** key and keep it pressed for over 3 seconds, when the minimum or maximum temperature is being displayed.

The digital display shows a message (rSt).

To confirm the process, the 'rSt' message starts to blink and the current temperature is being displayed.

Displaying the Set Value



1. Press the **SET** key briefly.

The set value is being displayed.



2. Press the **SET** key again or wait 5 seconds, to return to the previous message.

Changing the Set Value (i.e. the Required Temperature)

1. Press the **SET** key and hold it for over 2 seconds.


The set value is displayed and the  or  LED indicator flashes on the digital display.


Installation and operation

2. The displayed value may be decreased or increased with the  or  key until the digital display shows the required value.
3. Confirm the new set value with the **SET** key or wait 10 seconds — then, the value will be stored automatically.

Automatic Defrosting

The appliance defrosts automatically 4 times over a 24-hour period. The timer initiates with the first activation.


1. If there is a need for the change of automatic defrosting phases, press the  key and hold it for more than 2 seconds.

The digital display shows the  symbol.


The defrosting cycle is immediately initiated; in such a case, the subsequent defrosting cycle is executed after 6 hours.

Manual Defrosting

Additionally, aside of the automatic defrosting, manual defrosting may be activated any time.

1. Press the  key and hold it pressed for at least 2 seconds.

The manual defrosting is initiated.

The digital display shows the  symbol.

NOTE!

Water generated during defrosting evaporates automatically.


Key Combinations

Concurrent pressing of two of the below keys enable activation/deactivation of a number of functions.



Locking or unlocking of the temperature controller keys:

- in order to lock, press both keys concurrently and hold them pressed for more than 3 seconds; the digital display shows 'Pof'
- in order to unlock, press again both keys concurrently and hold them pressed for more than 3 seconds; until the digital display shows 'Pon'



Moving to the programming mode:

- press both keys concurrently and hold them pressed for more than 3 seconds; when the °C or °F LED indicators flash, subsequent settings may be introduced

SET + 


Return to the previously displayed message:


- press both buttons concurrently or wait for 15 seconds to leave the programming mode and return to the previously displayed message (value of temperature inside the appliance)

NOTE!

Subsequent settings or parameter changes should be introduced by service personnel only.

Switching the Internal LED Lighting On/Off

1. Press and release the  key.
Internal LED lighting is switched on.

2. Press the  key again.
The internal LED lighting is switched on.

EN

6 Cleaning and Maintenance

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Wash the appliance regularly.

Cleaning and Maintenance

2. Remove all objects from the appliance and store them temporarily in a cool room.
3. Remove used sheets from the appliance.
4. Clean sheets with a mild washing agent and a soft cloth or sponge in warm water.
5. Rinse sheets with fresh water and dry thoroughly with a soft cloth.
6. Wipe the internal and external surfaces of the appliance with a soft, damp cloth. Use a mild cleaning agent if required.
7. Wipe cleaned surfaces with a cloth moistened in fresh water.
8. Finally, dry thoroughly all washed surfaces.
9. The interior of the appliance should be wiped regularly (once a month) with a food-grade disinfectant.
10. Clean the door and the door seal of the appliance with a soft, damp cloth. To end with, dry the door and door seal thoroughly.
11. After cleaning, leave the door open for the appliance to dry completely.
12. If the appliance is not to be used for a longer period of time, clean it according to the instructions above. Leave the appliance open to prevent generation of mould and unpleasant odours inside.

Maintenance

We recommend you to have the appliance serviced at least once a year; if needed, we recommend entering into a service agreement.

The following operations should be regularly performed by a qualified specialist:

- cleaning the condenser with suitable tools (vacuum cleaner or soft brush);
- checking of electrical connections;
- checking of the thermostat and the sensor;
- checking of door and door seal.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. When malfunction cannot be removed, contact the technical service.

In such a case, provide article number, model name and serial number. These data may be found in the rating plate.

Error	Possible Cause	Solution
No functions available	Plug improperly inserted into a socket.	Remove the plug and insert it properly in the socket
	Electric power supply safety fuse damaged	Check the fuse, connect the appliance to another socket
	No power supply	Check the electric power supply
Temperature inside the appliance is too high / too low	Condenser obstructed with dust	Contact the service company
	Icy evaporator	Defrost the appliance
	Direct sunlight or heat sources in immediate vicinity	Move the appliance away from heat sources
	Poor air circulation around the appliance	Keep sufficient clearance from walls or other objects
	Ambient temperature too high	Place the appliance in the right place
	Door is not closed properly or it has been opened for too long	Close the door tightly; limit the door opening time to minimum
	Damaged or deformed door seal	Contact the service company

Possible Malfunctions

Error	Possible Cause	Solution
Temperature inside the appliance is too high / too low	Too little clearance between objects inside the appliance	Provide for sufficient clearance between objects inside the appliance
	Appliance is overloaded	Reduce the number of stored objects
	Incorrectly set temperature controller	Set the temperature control correctly
Noise level of the appliance rises	Appliance is not placed on an even surface	Place the appliance on an even surface
	Loose nuts/screws	Tighten nuts/screws
	Appliance touches walls or other objects	Keep sufficient clearance from walls or other objects
	Objects in the appliance in contact with each other	Provide for sufficient clearance between objects
Water leak	Appliance is not placed on an even surface	Place the appliance on an even surface
	Clogged condensed water drain opening	Clear the condensed water drain opening
	Condensed water drip tray damaged (if applicable)	Contact the service company
	Condensed water overflows the drip tray (if applicable)	Empty the condensed water drip tray regularly

The following phenomena are not malfunctions:

- Various sounds that are generated by the cooler during operation are a normal phenomenon and do not indicate any malfunctions.
- Splashing, bubbling and hums are generated by the coolant that circulates the system.
- Short, louder whirring/hooting or clicking sounds may be heard when the compressor of the appliance starts.

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

EN

Electrical appliances should be returned to designated collection points.

Coolant

The propellant used in the appliance is flammable. It should be utilised pursuant to national regulations in force.